



ONE WIRE ROPE TO UTILIZE BOTH UP & DOWN
 WILL REQUIRE 1 ROPE UP & DOWN ATTACHED
 TO HOIST DRUMS NO ROPE CLIP REQUIRED
 AT SHUTTER ADJUSTMENT POINT