


LICK OPTICS INSPECTION AND CLEANING SCHEDULE



Coude' Auxiliary Telescope – CAT

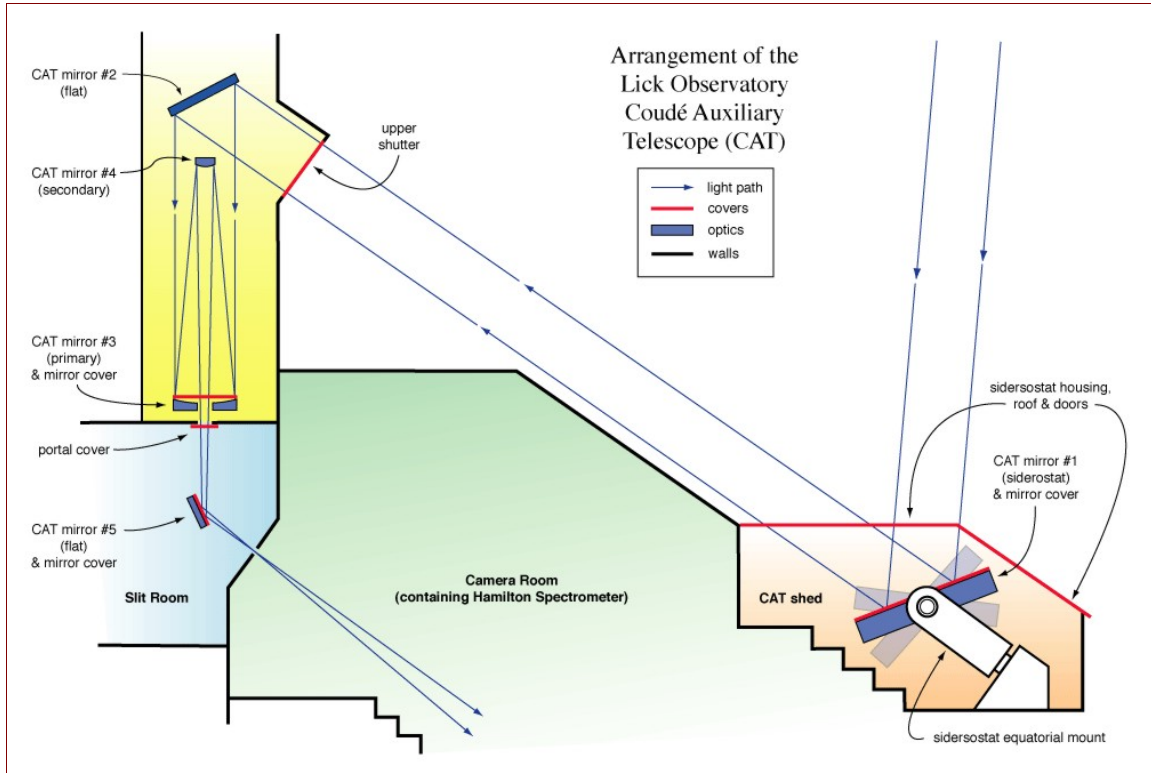

Optic #	Optic Notes	Procedures
#1	SiO overcoated aluminum Subjected to extreme moisture Up facing mirror – Protective cover	Inspect and wash monthly
#2	SiO overcoated aluminum Subjected to moderate moisture Down facing mirror – Protective enclosure	Inspect every 6 months Wash as needed
#3	SiO overcoated aluminum Subjected to moderate moisture Up facing primary mirror – Protective cover	Inspect monthly CO ₂ every other month Wash as needed
#4	SiO overcoated aluminum Subjected to moderate moisture Down facing secondary mirror	Inspect every 6 months Wash as needed
#5	Unsure of coating Up facing mirror – Protective cover	Inspect monthly Remove & wash as needed